

Firmware upgrade Guide

ALERT!

DO NOT REMOVE USB DRIVE FROM THE TV DURING UPGRADE.
DO NOT TURN OFF TV DURING UPGRADE
IF POWER GOES OFF WHILE UPGRADE, TV WILL NOT TURN BACK ON.

In this case, contact Samsung call center (1-800-SAMSUNG)



Turn on the TV and insert USB memory drive into "SERVICE" or "WISE-LINK" port on the side or the back of the TV.

Press "Menu" button.

Use arrow (▲,▼) button to scroll up or down.



Select "Setup" and press Enter.

 
Scroll down to select "SW Upgrade" and press enter on the remote control.




"USB" will be displayed. Press "Enter".

If upgrade version is higher than current version, select "Yes".

Upgrade will not be performed if new firmware is the same or lower than current version.

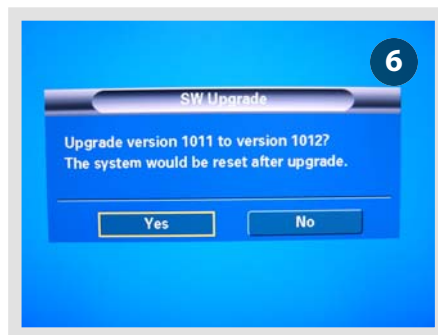

 You will see this while scanning USB drive and upgrading firmware.

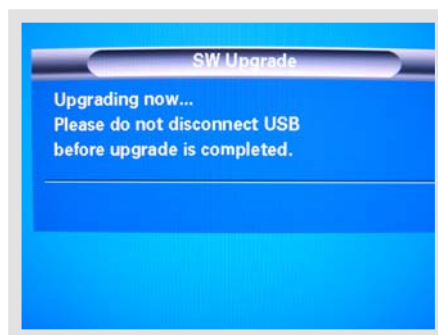



After completing upgrade TV will turn off in 3 seconds and turn back on.

Then remove USB drive from TV when upgrade is completed.





HOW TO CHECK FIRMWARE VERSION?



Press "Menu" button and select "Setup" scroll down to select "Function Help" and press "Enter"

"Off"/"On" Box will appear and Using up/down arrows, select "On"(will have a yellow border)

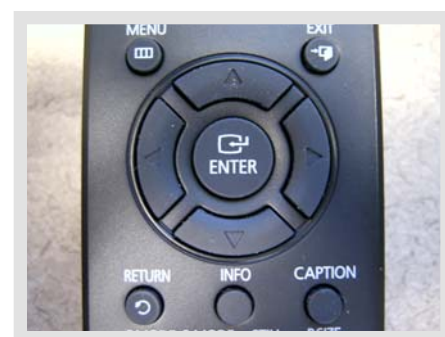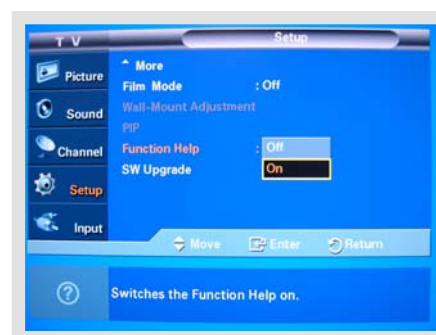

Press "INFO" button. Firmware will appear at the bottom of the menu.

Ex) T-JASMAUS0-1012
"1012" is version number.

